
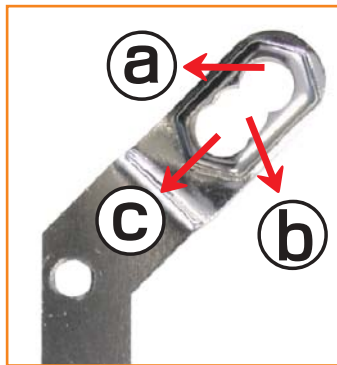


INSTALLATION GUIDE

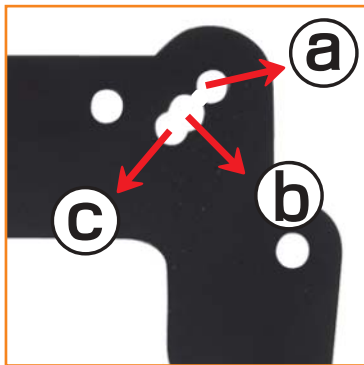

- Ⓐ Socket LGA1366
- Ⓑ Socket LGA1156
- Ⓒ Socket LGA775

- ① 取り付け金具にバックプレート固定用ネジ受けをネジ受け固定金具で取り付けてください。
 - ② 保護シートを剥がした本体に取り付け金具を取り付け金具用ネジ(無限式に付属)で固定します。
 - ③ バックプレートをバックプレート固定用ネジで、マザーボード裏面より本体へ固定します。(本体底面(コア接触面)がCPUのコア部分と平行になるようにしてください。)
- ※バックプレートを固定する時、マザーボードに接触する面に絶縁部分が必ずくるようにしてください。
- ※CPUのコア部分には必ず、シリコングリスを塗ってください。
- ※マザーボードによっては取り付けが出来ない場合があります。

- ① Attach the "Screw Cup for fixing Back-Plate" onto the "Metal Assembly Clip" by using the "Fixing Cup for Screw".
 - ② Attach the "Metal Assembly Clip" by using the "Screw for Metal Assembly Clip" (included in the original Mugen 2 CPU Cooler package).
 - ③ Gently place the heatsink onto the CPU heat spreader, then attach the "Back-Plate" and the heatsink by using the "Screw for Back-Plate" from the rear side of the motherboard.
- ※It is very important to make sure the Back-Plate (surface with the insulation washer side) is placed towards the motherboard.
- ※Please make sure to apply thermal grease onto the CPU heat spreader.
- ※Depending on the motherboard, this product may not be installed due to compatibility issues.

